


Instructions for mounting adapter to engine

Note: always mount adapter ring to engine first, then attach assembly to the stand. Use hardware from car to attach ring to engine. (M10 x 110mm, M10 x 75mm)

Use these holes to attach to universal engine stand

Leave fasteners finger tight until motor is on stand. Then torque snug or 15 ft-lbs.

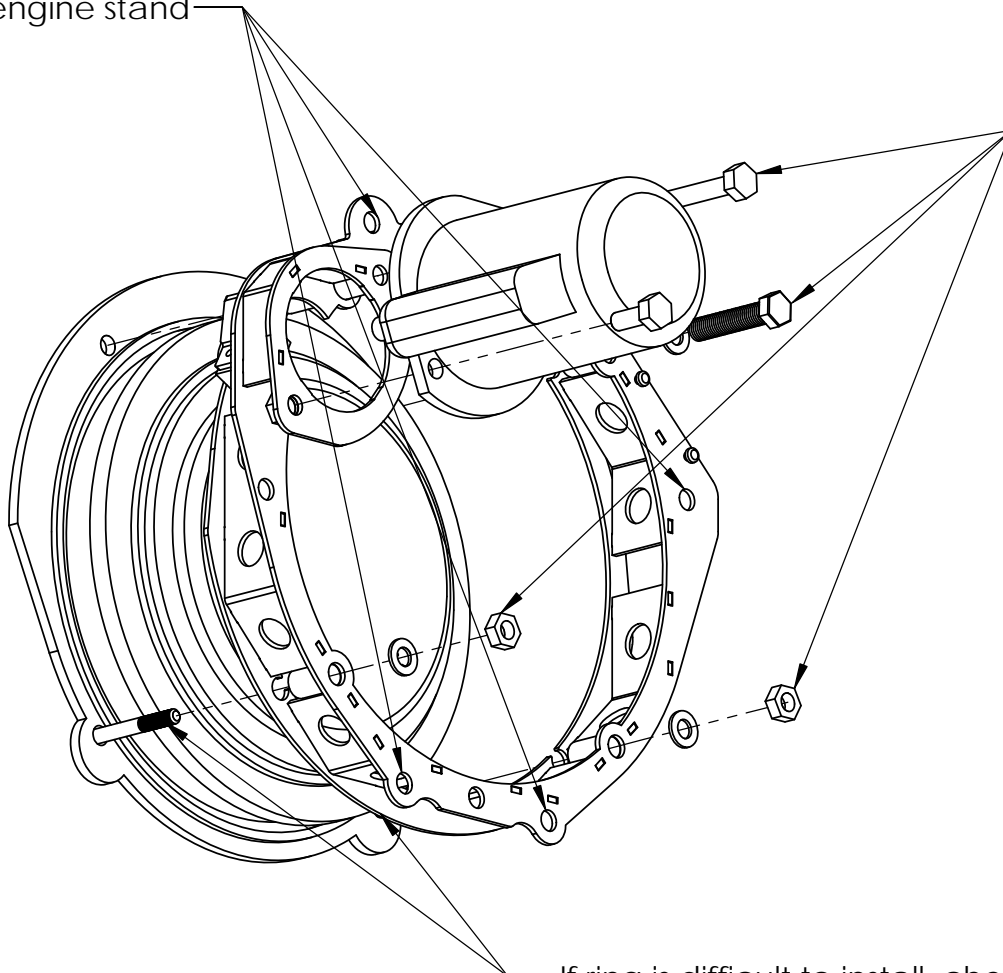

If ring is difficult to install, check the studs for straightness. Many are bent!